


Holland ILS Slider

Easy Installation - No Welding



1.
Lift Fifth Wheel Top Plate and Remove existing Brackets

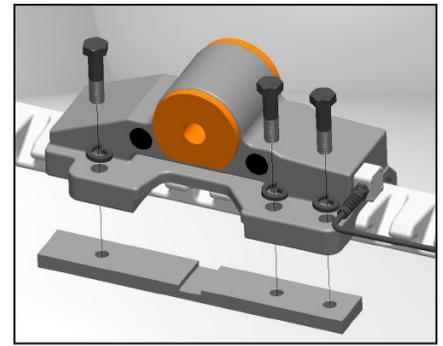

2.
Place Holland ILS Load Cell on Slide Rail, Install 3 Cap Screw/Lock Washer Assemblies and Connect Vulcoder



3.
Return Fifth Wheel Top Plate and Secure Load Cell and Vulcoder Cable Underneath the Slide Plate



See Tech bulletin [B-148](#) for complete installation instructions

800-237-0022

Slonboard.com

Designer and Manufacturer
of State-of-the art
on-board scales systems

